

Mini-CD Player PM-1



Getting Started

Notice

© 2001 Compaq Computer Corporation

COMPAQ and the Compaq logo registered in U.S. Patent and Trademark Office.

iPAQ is a trademark of Compaq Information Technologies Group, L.P.

Microsoft and Windows are trademarks of Microsoft Corporation.

All other product names mentioned herein may be trademarks or registered trademarks of their respective companies.

Compaq shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is subject to change without notice.

The information in this publication is subject to change without notice and is provided "AS IS" WITHOUT WARRANTY OF ANY KIND. THE ENTIRE RISK ARISING OUT OF THE USE OF THIS INFORMATION REMAINS WITH RECIPIENT. IN NO EVENT SHALL COMPAQ BE LIABLE FOR ANY DIRECT, CONSEQUENTIAL, INCIDENTAL, SPECIAL, PUNITIVE, OR OTHER DAMAGES WHATSOEVER (INCLUDING WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF BUSINESS INFORMATION), EVEN IF COMPAQ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE FOREGOING SHALL APPLY REGARDLESS OF THE NEGLIGENCE OR OTHER FAULT OF EITHER PARTY AND REGARDLESS OF WHETHER SUCH LIABILITY SOUNDS IN CONTRACT, NEGLIGENCE, TORT, OR ANY OTHER THEORY OF LEGAL LIABILITY, AND NOTWITHSTANDING ANY FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

The limited warranties for Compaq products are exclusively set forth in the documentation accompanying such products. Nothing herein should be construed as constituting a further or additional warranty.

Compaq iPAQ Personal Mini-CD Player PM-1

First Edition (September 2001)



258651-001

Thanks for buying a Compaq iPAQ Personal Mini-CD Player PM-1, and welcome to the world of digital audio.

What is Digital Audio?

Digital audio is a way of compressing recorded sound so that it takes up much less storage space. A song is reduced to about 1/10 its size, allowing you to store much more music on one CD. There are many types of digital audio formats, but MP3 is the most popular.

Why Digital Audio?

Digital CD players provide many benefits, including:

- > Up to 6 hours of music on one mini-CD
- > High-quality sound
- > Organization and personalization of your music
- > The ability to take your favorite music with you anywhere!

Is Your PC Ready for Digital Audio?

If you have a multimedia PC with a CD-RW or DVD-RW drive, you are probably ready to create CDs. To use the MusicMatch Jukebox software included on the Installation CD with your PM-1, we recommend the following computer requirements.

- > 233 MHz processor
- > Microsoft Windows 95 (with service pack 1), Windows NT 4.0 (with service pack 4), Windows 98, Windows ME, Windows 2000, or Windows XP
- > 100 MB free hard drive space
- > CD-RW or DVD-RW drive
- > 64 MB RAM

How to Get Help

If you have any trouble setting up your PM-1 or would just like more information, visit Compaq's Web site:

compaq.com/iPAQaudio

Register Your PM-1

Please register your PM-1 to receive a more personalized support experience. You may register at Compaq's Web site:

compaq.com/go/register

Warranty

Your PM-1 has a One-Year Limited Warranty. Please see the enclosed Warranty Card for further details.

What's in the Box?

Your iPAQ PM-1 package contains the following components.



- | | |
|---------------------------|----------------------------------|
| ① Personal Mini-CD Player | ⑤ Two AAA rechargeable batteries |
| ② Inline remote control | ⑥ Three blank 8cm discs |
| ③ Headphones | ⑦ Installation CD |
| ④ AC power adapter | ⑧ Getting Started guide |

What's on the Installation CD?

The Installation CD that comes with your PM-1 contains Microsoft Windows Media Player, MusicMatch Jukebox, and the PM-1 User Guide.

 
Installing the Batteries

Your iPAQ Personal Mini-CD Player PM-1 is equipped with rechargeable batteries. You have the option of listening to your favorite music on battery power or plugging the PM-1 into a standard electrical outlet.

Note: Before using the PM-1 for the first time, the Ni-MH batteries should be charged for 8 hours.

Follow these steps to install the batteries:

- 1. Slide the release lever on the front of the PM-1 to the open position to open the PM-1 cover.
- 2. Push back the tab on the side of the battery compartment cover and lift up to remove it.
- 3. Place the rechargeable batteries that came with your PM-1 into the battery compartment according to the diagram inside the compartment.

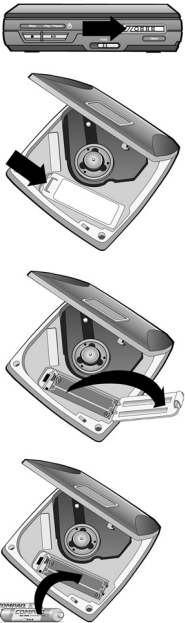

WARNING: Do not mix rechargeable batteries with non-rechargeable batteries.

Charging the Batteries

The battery icon on the display screen shows the amount of charge held by the batteries (when the PM-1 is not plugged into an AC electrical outlet). The battery icon is divided into three segments that show the approximate power capacity of the batteries. Replace or recharge the batteries when the battery icon goes blank.

To charge (or recharge) the batteries that came with your PM-1, plug the PM-1 into a standard electrical outlet while the batteries are in the battery compartment. Do not charge the batteries for more than 8 hours to avoid reducing battery life.

 
Using the Power Supply Adapter

Before using the power supply adapter, make sure your local voltage corresponds to the adapter's voltage. Only use the supplied adapter because other types of adapters may damage the player. To connect the power supply adapter, plug the large two-pronged end into a standard electrical outlet and plug the single-pronged end into the DC 3V socket on the player.

Note: Always disconnect the power supply adapter when you are not using it unless you are recharging the batteries.

Features of Your PM-1 Player

Your PM-1 player has the following features on its left side, front, and right side.

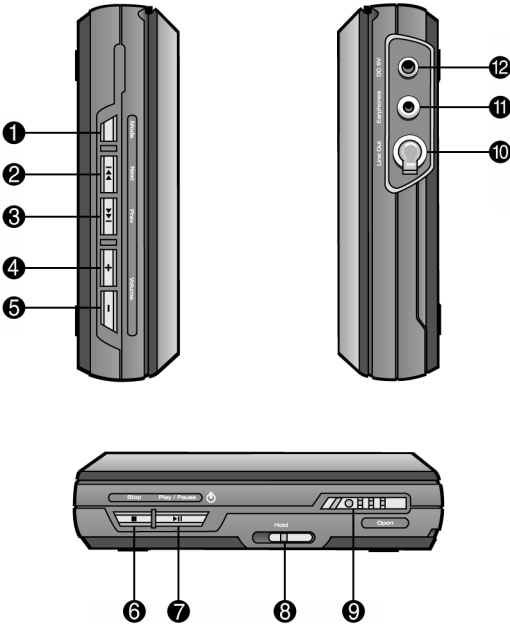


No.	Control	Function
1	Mode	Program, Repeat, Equalizer, File/Album searching
2	Next	Skip forward to next track/directory
3	Prev	Skip backward to previous track/directory
4	Volume +	Increase the volume level
5	Volume -	Decrease the volume level
6	Stop	Stop playback / power off (hold for 3 seconds)
7	Play/Pause	Start playback / power on / pause playback
8	Hold	Lock all controls on the player
9	Open	Open or lock the door of the player
10	Headphone	Headphone jack on the player
11	Line Out	Line out jack to connect with other amplifiers
12	DC 3V	DC 3V to connect with power supply adapter

Features of Your Inline Remote Control

The function keys on the inline remote control are similar to those on the PM-1 player. The inline remote control is equipped with an LCD display so that you can conveniently check the playback status.

 Plug your inline remote control into the headphone jack on the PM-1. Your headphones then plug into the headphone jack on the inline remote control.

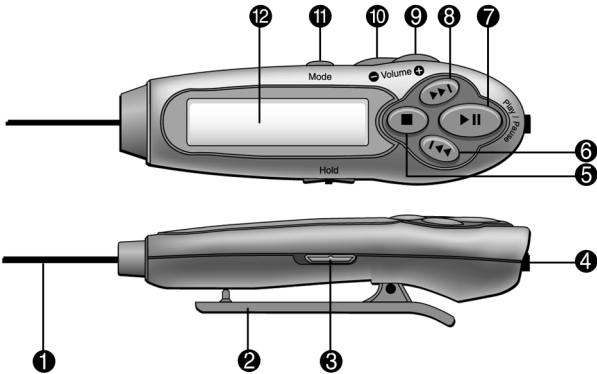

No.	Control	Function
1	Cord	Cord to connect the remote and the unit
2	Clip	Secures the inline remote while jogging
3	Hold	Lock all controls on the inline remote control
4	Headphone	Headphone jack on the inline remote control
5	Stop	Stop playback / power off (hold for 3 seconds)
6	Previous	Skip backward to previous track/directory
7	Play/Pause	Start playback / power on / pause playback
8	Next	Skip forward to next track/directory
9	Volume +	Increase the volume level
10	Volume -	Decrease the volume level
11	Mode	Program, Repeat, Equalizer, File/Album searching
12	LCD	Liquid Crystal Display screen